


MICRO MOSFET III

WITH WIRING

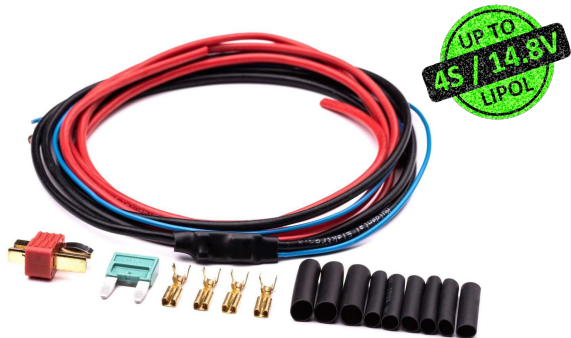

Limitation: spring M170 (current 35A)

It has to be installed by expert.
He must know how to disassemble the replica and solder.
Never use a soldering gun!

www.jefftron.net



Device wiring procedure

- 1) Black wire lead to the battery negative (leads alone from device)
- 2) Black wire lead to the motor negative (comes with the blue wire)
- 3) Blue wire lead to the one trigger contact (no matter which one)
- 4) Red wire lead to the battery and motor positive. Add fuse on this wire close to the battery (included in package).
- 5) Rest of blue wire cut and lead between another trigger contact in the gearbox and anywhere on the red wire.

Be extra sure to connect wires appropriately, otherwise you could destroy the device, weapon or battery.

